

BREAK SAFE SERIES 4000

NOTE* ATTACH THE BREAKAWAY CABLE TO THE REAR OF THE TOW VEHICLE USING A SECURE ANCHOR POINT. DO NOT HOOK CABLE TO TOW BALL OR SAFETY CHAIN ANCHOR.


THE BREAKSAFE UNIT IS PROTECTED BY AN INTERNAL FUSE. IF THE UNIT FAILS TO OPERATE, PLEASE CHECK THE FUSES FIRST.

REPLACEMENT FUSES ARE AS FOLLOWS:

ELECTRIC BRAKE FUSE - TO SUIT SERIES 4000 2 & 4 WHEEL ELECTRIC BRAKES - 20AMP

BRAKE LIGHT FUSE 15 AMP

WIRING DIAGRAM

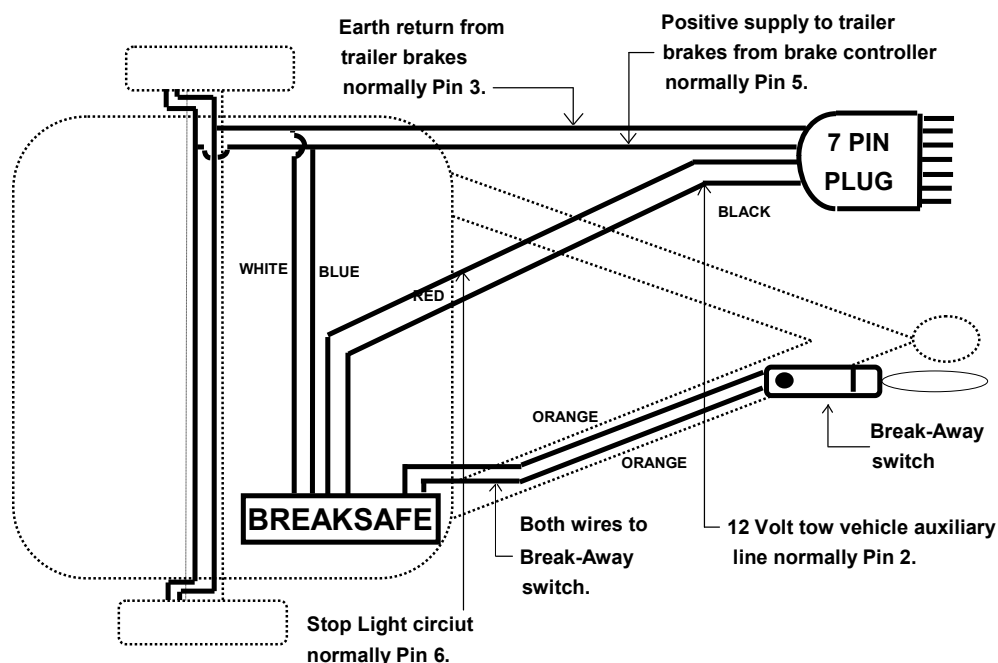

TROUBLESHOOTING

Charge light NOT ON when the trailer is connected with the tow vehicle.	Check tow vehicle's auxiliary line.
BUZZING NOISE from Break-Safe when the test button is pressed or the Break-Away pin is pulled.	Battery is dead flat or there is a short circuit in the trailer's electric brakes which has blown the Breaksafe internal fuse. Charge battery and check internal fuse and replace as necessary.
Electric brakes &/or brake lights do not activate when test button is pressed or breakaway pin is pulled.	Check battery level and check internal fuse.
Battery level test lights remain ON.	Break-away pin not fully inserted into break-away switch.

PLEASE PASS THESE INSTRUCTIONS ON TO OWNER