

BREAK SAFE SERIES 5000 AND 5000XP

NOTE* ATTACH THE BREAKAWAY CABLE TO THE REAR OF THE TOW VEHICLE USING A SECURE ANCHOR POINT. DO NOT HOOK CABLE TO TOW BALL OR SAFETY CHAIN ANCHOR.


THE BREAKSAFE UNIT IS PROTECTED BY 2 INTERNAL FUSES. IF THE UNIT FAILS TO OPERATE, PLEASE CHECK THE FUSES FIRST.

REPLACEMENT FUSES ARE AS FOLLOWS:

**ELECTRIC BRAKE FUSE - TO SUIT SERIES 5000 2 & 4 WHEEL ELECTRIC BRAKES - 20AMP
- TO SUIT SERIES 5000 XP 6 WHEEL ELECTRIC BRAKES - 25AMP**

BRAKE LIGHT FUSE - TO SUIT ALL MODELS - 15AMP

WIRING DIAGRAM

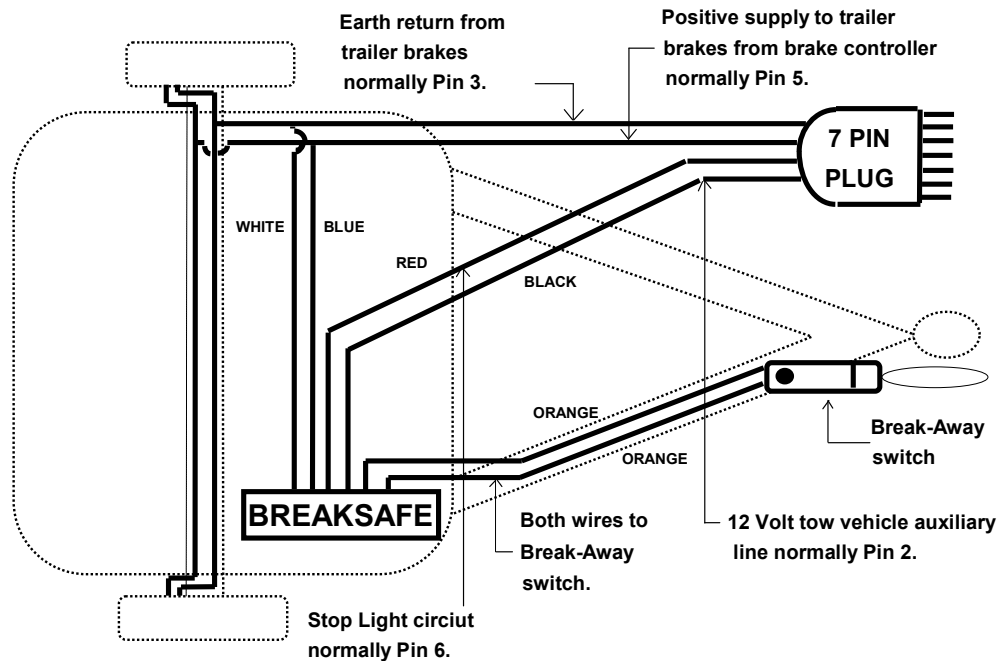

TROUBLESHOOTING

Charge light NOT ON when the trailer is connected with the tow vehicle.	Check tow vehicle's auxiliary line.
BUZZING NOISE from Break-Safe when the test button is pressed or the Break-Away pin is pulled.	Battery is dead flat or there is a short circuit in the trailer's electric brakes which has blown the Breaksafe internal fuse. Charge battery and check internal fuses and replace as necessary.
Electric brakes &/or brake lights do not activate when test button is pressed or breakaway pin is pulled.	Check battery level and check internal fuses.
Battery level test lights remain ON.	Break-away pin not fully inserted into break-away switch.

PLEASE PASS THESE INSTRUCTIONS ON TO OWNER