

Warning

To comply with NSW regulations, only connect a Breaksafe 5000 or 6000 with a Breaksafe or Redarc RM6000 Remote Battery Monitor. **Connecting any other brand voltage monitor will void all warranty on your Breaksafe and breakaway battery.** This includes **wireless** and **wired** monitors. By connecting these other brand voltage monitors you are bypassing the safety components built into the Breaksafe. Customers who are connecting these generic brand monitors are risking burning tracks and components on the Breaksafe circuit board and/or flattening batteries prematurely.

If you connect a Breaksafe or Redarc RM6000 Remote Battery Monitor to your Breaksafe and you are having problems we will be happy to do all we can to solve it. If you connect any other brand monitor or voltmeter to your Breaksafe Breakaway unit you are on your own.

We are fed up with Breaksafe's being returned for warranty claims when the damage has been caused by the fitting of other generic brand voltage monitors. Some of these monitors are flattening the Breaksafe breakaway battery in a couple of days. We will not warranty the battery if these voltage monitors are fitted to a Breaksafe.

The Breaksafe has many components built in to protect it from dead shots and over current circumstances. Combined with the Breaksafe or Redarc Remote Monitor the Breaksafe system is an extremely reliable breakaway system.

The Management
R V Electronics
Breaksafe Australia